

# Sligh

---

Installation Instructions



9765 TV CONSOLE

---

# Set Up Instructions

## 9765-1-LR

### TV CONSOLE

## Enclosed

Five adjustable wood drawer storage stop handles with Velcro compatible bottom edges.

Two wood adjustable drawer dividers with Velcro compatible bottom edges.  
Instruction guide.

One wood and one speaker cloth center drawer panels.


One wood and one speaker cloth center door panels.

## Tools Required

Phillips head screwdriver

## Set Up Instructions

1. Move the console near the wall and plug the power cords for the surge suppressor into a nearby wall outlet. Move the cabinet to its final position.
2. Level the cabinet at this time. Taking the time to level the cabinet properly will insure good door/drawer alignment and function. Place a level on the unit to check the level of the cabinet.

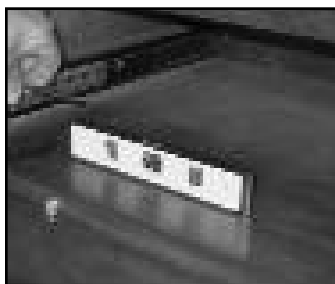

This cabinet includes manually adjusted levelers located under the base at the four corner plus a center post position. These levelers are accessed by leaning or raising the lower cabinet. Place a level on the unit. Turn the leveler clockwise by hand to raise the cabinet or counter clockwise to lower the cabinet.




## Special TV Console Features

### Interchangeable Center Drawer Front

The front section of the center drawer is designed to accommodate a center channel speaker for surround sound speaker systems. This drawer is equipped with optional wood or speaker cloth center drawer panels. When using a center channel speaker remove the wood panel with decorative bail pulls from the drawer front perimeter by removing the screw clips on the back side of the drawer front which hold the panel in place. Remove the wood panel, insert the optional speaker cloth panel and re-attach the screw clips. Wires for connecting the center channel speaker can be routed thru the hole in the separator panel, under the media storage drawer bottom (which is removable) and thru the rear drawer back.

**Note:** With the speaker cloth panel in place the center drawer can be opened by first opening the adjacent right hand drawer then accessing the finger grip on the right side of the center drawer.

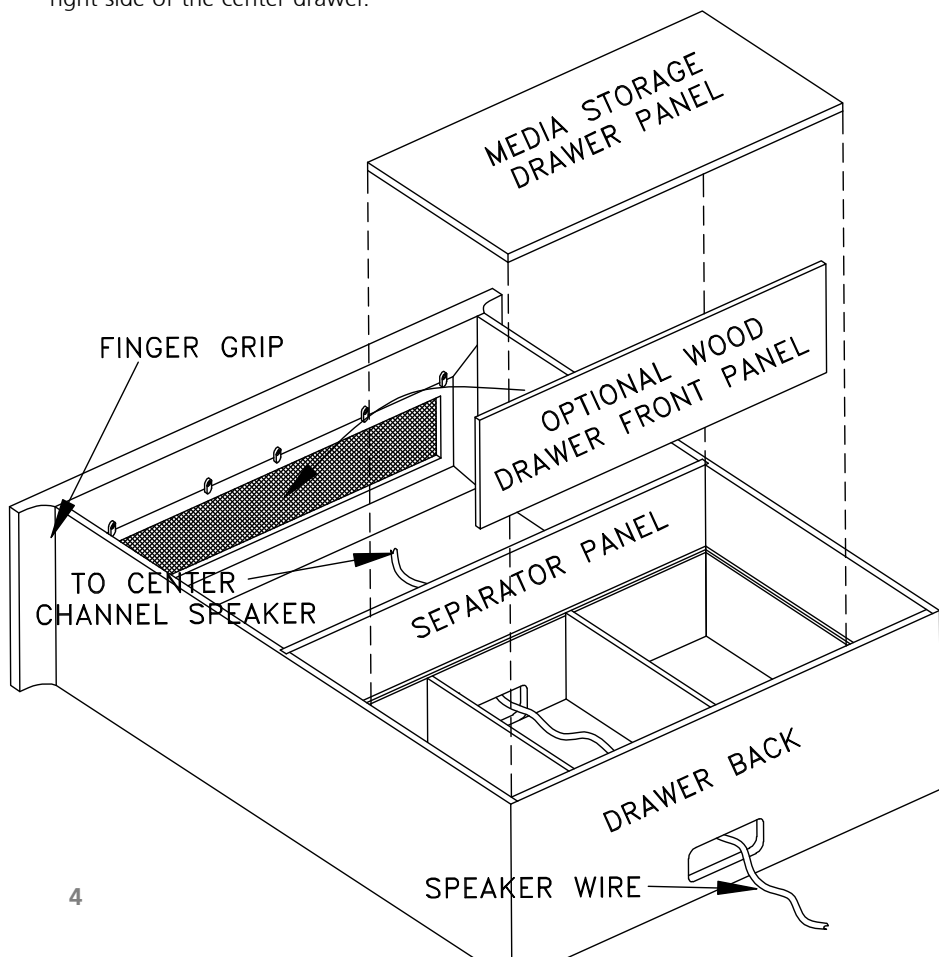

## Special TV Console Features

### Height adjustable wood shelving

Height adjustable wood shelves are located behind the right, left and center doors of the cabinet. To adjust the height or remove these shelves, remove the screw from bottom side of the four metal adjustable shelf pins and remove the shelf from cabinet.

Relocate the metal adjustable shelf pins to the desired height, re-install the shelf, insert the holding screw through the bottom side of the metal shelf pin and tighten the screw.



### Surge Suppressor

The console is equipped with a surge suppressor which helps to protect electronic equipment from damage due to abnormal surges in electric current. It is located on the face of the lower back panel.

Access it from inside the cabinet. This unit includes 5 plug-in receptacles. It is recommended that you plug all electrical related equipment into the surge suppressor.

**To activate:** Route the surge suppressor power cord through the access hole located in the back panel and plug it into a nearby wall outlet.



### "Multi-Flex" storage drawers

Innovative (patents pending) media storage drawers provide flexible storage possibilities for your DVD's, cassettes, VCR tapes etc. The left and right side drawers include an adjustable "stop handle" to assist in keeping storage items upright, visible and neatly organized. This stop handle has a Velcro edged bottom which allows them to be moved and re-positioned on top of a Velcro compatible drawer bottom in a variety of positions. The rear section of the center drawer includes three of these "stop handles" in addition to two adjustable/removable wood "dividers" which can be used to section off the drawer interior.



# Special Features

## SMARTEYE

The "SmartEye" enables Sligh to maintain the design integrity of the cabinet without sacrificing appearance for function.

**It is designed to allow remote control of electronic components stored behind closed doors. SmartEye DOES NOT come with its own remote. Instead it works with MOST previously purchased universal remotes or the standard remote that comes with your electronic component.**

*For example: You can adjust the volume or sound track on your DVD player by pointing your hand held remote at the **signal receiver** on the face of the cabinet and pressing the appropriate control button on your remote. All while you are sitting on your sofa watching the TV screen!*

## HOW IT WORKS

The "SmartEye" includes an external signal receiver, internal control box, internal signal emitters and a power cord/transformer.

### SIGNAL RECEIVER

Typically located in a cross rail just under the top of the cabinet. It receives and transmits a signal from your hand held remote to a signal emitter located near the electronic component storage shelf.




**Point your remote at the Signal Receiver...REMEMBER, LINE OF SITE.**

- Note:**
1. A green or red light appears inside the signal receiver to alert you that your command is being transmitted.
  2. This system functions with IR (infrared) remotes only. It does not function with RF (radio frequency) remotes.
  3. The "SmartEye" will transmit a signal within 10' -12' of your remote.

### CONTROL BOX

Typically located on the inside face of the back panel or under the top surface. Its purpose is to be a power source and help transmit the actual signal from your hand held remote to the electronic component.

Signal emitter cords, the signal receiver cord and the power cord are all plugged into the control box.

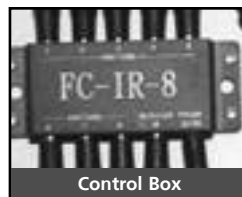

### SIGNAL EMITTERS

Small round electronic devices that are located on the face of the inside end panels near the component storage shelves. It transmits the actual signal to the sensors located inside your electronic components.




- Note:** *The face of your electronic component must be positioned behind the round signal emitters for the "SmartEye" to function. The number of emitters varies depending on the number of storage shelves included inside the cabinet. Almost all cabinets have at least 2 emitters. Some cabinets have as many as 8 emitters.*

# Special TV Console Features


## POWER CORD

It is plugged into the control box when received by the customer. The other end includes a "transformer-box plug" that is intermingled with the power cord for the surge suppressor. Plug this end into a nearby wall outlet prior to placing the TV console against the wall. The power cord for the surge suppressor must also be plugged into a nearby wall outlet to be operable.

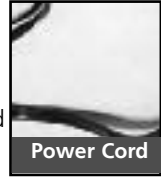

**Note:** *The "SmartEye" will not function unless the power cord is correctly plugged in at both ends. Check to be sure this is the case prior to attempting operation.*

## CONFIGURATION

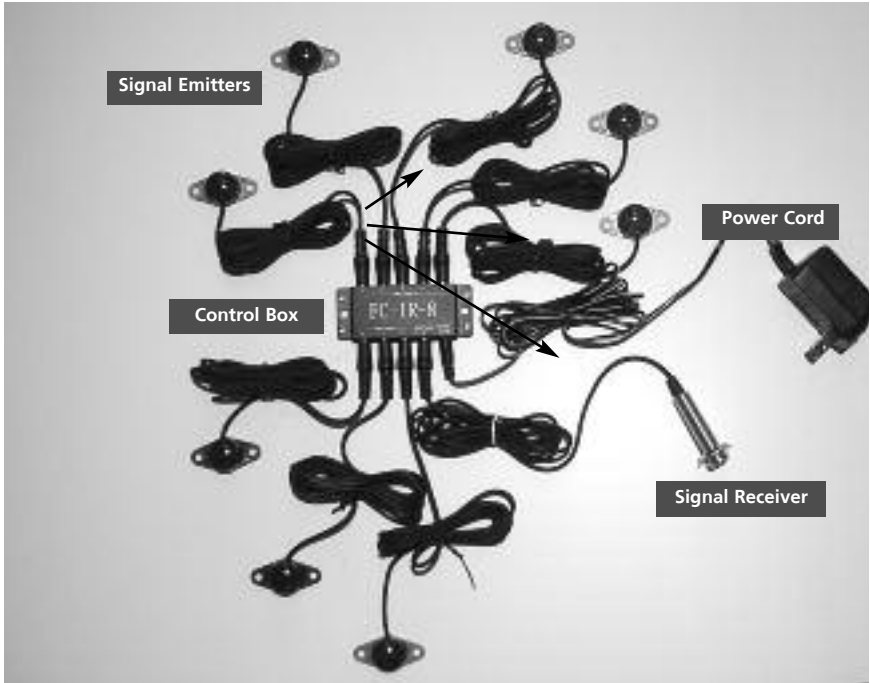

Sligh

Sligh Furniture Company Holland, Michigan [www.sligh.com](http://www.sligh.com) 9765 5/08